

How to start up when xlm crash in HiRA

1. STOP RUN
2. Turn off Sparky interlock (blue Lecroy dual gate generator in the electronic rack upstairs)
3. Turn off the PA supply power (upstairs)
4. Exit from motherboardCcontrol program (File→quit)
5. Go downstairs
6. Reset VME (left most rack) and spdaq20 (downstairs by the electronic rack)
7. Turn on Sparky, PA power (Upstairs). The power supply may not come on, have to report turning the PA power off and on a couple times. To be sure, there should be two green lights on the big blue power supply downstairs.
8. Click on chipboard window; type “gochip”(File→fast configure; load file 02018setup(?)Plus1
9. Start new run.

II. If current monitor increase and alarm came up:

1. STOP RUN
2. Turn off Sparky.
3. Exit from motherboardCcontrol program (File→quit)
4. Click on chipboard window; type “gochip”(File→open→ load file 02018setup(?)Plus1
5. Start run.