

# TABLE OF CONTENTS

Section		Page
I	GENERAL DESCRIPTION AND OPERATION	
	General . . . . .	1-1
	Model 112. . . . .	1-1
	Models 112 and 115; 112B and 115B . . . . .	1-2
	Models 112 and 112B; Controls and Terminals . . . . .	1-3
	Power/Dial Multiplier Switch . . . . .	1-3
	Frequency Range Switch . . . . .	1-3
	Frequency Dial and Frequency Vernier . . . . .	1-4
	Function Selector Switch, Output Attenuator, and D-C Zero Adjust . . . . .	1-4
	The 5 Volt Triangle, 5 Volt Sine and 5 Volt Square Outputs . . . . .	1-5
	The 10 Nsec. Square Wave Output . . . . .	1-5
	sync output . . . . .	1-5
	Minus 2.5 Volt Peak Ramp . . . . .	1-5
	VCG Input . . . . .	1-5
	<b>Gated/Continuous/Trigger</b> Mode Switch . . . . .	1-5
	Manual Trigger Button . . . . .	1-6
	Trigger Input Connector . . . . .	1-6
	Trigger Slope/Level Control . . . . .	1-6
	Start-Stop Point Control . . . . .	1-6
	Models 115 and 115B; Controls and Terminals . . . . .	1-6
	Phase Lock Continuous Triggered Mode Switch . . . . .	1-7
	Trigger Phase Lock Slope/Level/Phase Control . . . . .	1-7
	Phase " <b>Un-Cal</b> " Indicator Light . . . . .	1-7
	Trigger <b>Gated</b> Switch . . . . .	1-8
	Start-Stop Point Potentiometer. . . . .	1-8
	Models 116 and 116B; Controls and Terminals . . . . .	1-8
II	SPECIFICATIONS AND TEST PROCEDURES	
	Specifications . . . . .	2-1
	Test Procedures . . . . .	2-9
	General Information . . . . .	2-9
	Testing <b>Information</b> . . . . .	2-9
	Other Kinds of Tests . . . . .	2-9
III	THEORY OF OPERATION	
	Model 112, General Theory of Operation. . . . .	3-1
	Circuit Description . . . . .	3-5
	Model 115, General Theory of Operation. . . . .	3-16
	Circuit Description. . . . .	3-19
	Model 116, General Theory of Operation. . . . .	3-24
	Circuit Description . . . . .	3-24

**Iv CALIBRATION**

<b>Model 112 Calibration Procedure . . . . .</b>	<b>4-1</b>
<b>Equipment Required . . . . .</b>	<b>4-1</b>
<b>Power Supply Board . . . . .</b>	<b>4-1</b>
<b>Main Board . . . . .</b>	<b>4-2</b>
<b>Power Amplifier. . . . .</b>	<b>4-2</b>
<b>Sine Waveform Adjustments . . . . .</b>	<b>4-2</b>
<b>VCG Board . . . . .</b>	<b>4-3</b>
<b>Check Ranges . . . . .</b>	<b>4-4</b>
<b>Trigger Board. . . . .</b>	<b>4-4</b>
<b>Front Panel Output . . . . .</b>	<b>4-4</b>
<b>Model 115/116 Calibration Procedure . . . . .</b>	<b>4-5</b>
<b>Equipment Required . . . . .</b>	<b>4-5</b>
<b>Power Supply Board . . . . .</b>	<b>4-5</b>
<b>Main Board . . . . .</b>	<b>4-6</b>
<b>Power Amplifier. . . . .</b>	<b>4-6</b>
<b>Sine Waveform Adjustments . . . . .</b>	<b>4-7</b>
<b>VCG Board . . . . .</b>	<b>4-7</b>
<b>Check Ranges . . . . .</b>	<b>4-8</b>
<b>Trigger Board. . . . .</b>	<b>4-8</b>
<b>Front Panel Output . . . . .</b>	<b>4-9</b>
<b>Phase Lock Calibration . . . . .</b>	<b>4-9</b>

**V PARTS LIST**

<b>General . . . . .</b>	<b>5-1</b>
<b>Parts List Arrangement . . . . .</b>	<b>5-1</b>
<b>List of Manufacturers . . . . .</b>	<b>5-1</b>

**VI SCHEMATIC DIAGRAMS**

## LIST OF ILLUSTRATIONS

Figure No.		Page
3-1	Function Generator Block Diagram . . . . .	3-1
3-2	Model 112 Basic Block Diagram . . . . .	3-2
3-3	Trigger Mode Logic Diagram . . . . .	3-3
3-4	Phase Lock Mode Logic Diagram. . . . .	3-17
3-5	Model 116 Trigger Mode Logic Diagram . . . . .	3-23
5-1	Model 112 Chassis Assembly. . . . .	5-3
5-2	Models 115/116 Chassis Assembly . . . . .	5-5
5-3	Front Panel Assembly (112-020) . . . . .	5-7
5-4	Front Panel Assembly (115-030) . . . . .	5-12
5-5	Second Subpanel Assembly (115-031/116-031) . . . . .	5-16
5-6	Main Board Assembly (110-012) . . . . .	5-20
5-7	Trigger Board Assembly (112-021) . . . . .	5-26
5-8	VCG Board Assembly (111-018). . . . .	5-33
5-9	Power Supply and Output Amplifier Board Assembly (110-013). . . . .	5-38
5-10	Battery Regulator Assembly (112-022). . . . .	5-42
5-11	Battery Pack Assembly (112-023). . . . .	5-46
5-12	Mother Board Assembly (112-032) . . . . .	5-47
5-13	Mother Board Assembly (115-034) . . . . .	5-49
5-14	Connector Board Assembly (112-025) . . . . .	5-51

# WARRANTY

**WAVETEK warrants instruments manufactured by it to have met WAVETEK's published specifications at the time of shipment of such instruments, and agrees to repair within one year of shipment, such instruments or their components (excluding batteries), which under normal use are found to be defective as a result of our manufacturing. Our obligation under this warranty is limited solely to repairing any such instrument which in our sole opinion proves to be defective when returned to our factory. Transportation to the factory is to be prepaid by the purchaser. Instruments returned to the factory will be accepted only when prior authorization has been given by a representative of WAVETEK.**

**This warranty does not apply to any of our products which have been repaired or altered by persons not authorized by us, or not in accordance with instructions furnished by us. If the instrument is defective as a result of misuse, improper repair, or abnormal conditions or operations, repairs will be billed at cost.**

**WAVETEK assumes no responsibility for its product being used in a hazardous or dangerous manner either alone or in conjunction with other equipment. WAVETEK assumes no liability for secondary charges or consequential damages, and in any event, WAVETEK's liability for breach of warranty under any contract or otherwise, shall not exceed the purchase price of the specific instrument shipped and as to which a claim is made.**

**Any recommendations made by WAVETEK for the use of its products are based upon tests believed to be reliable, but WAVETEK makes no warranty of the results to be obtained. This warranty is in lieu of all other warranties, expressed or implied, and no representative or person is authorized to represent or assume for us any liability in connection with the sale of our products other than set forth herein.**