

How to bring up the HiRA temperature monitoring page

Click on NCS logo → panelmate → File open → \HiRA\HiRA_PLC_NEW → 01